


Centre

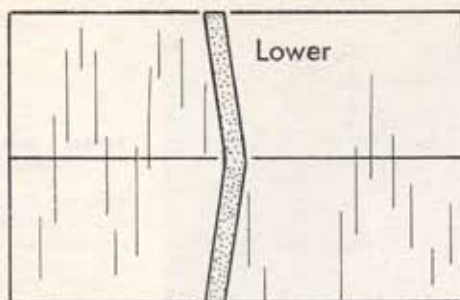


Lower

Wing mounts $\frac{3}{32}$ " balsa

$\frac{1}{16}$ " fin

Soft wire hinges

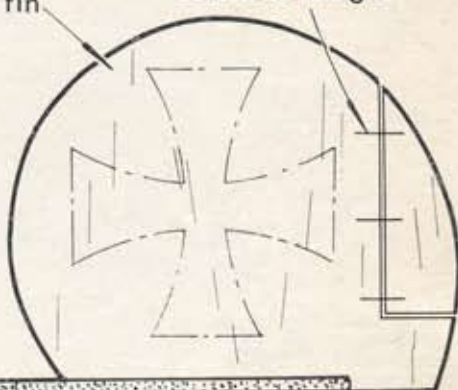

Tailplane position

$\frac{3}{16}$ " light balsa fuselage

$\frac{1}{16}$ " doubler

$\frac{1}{32}$ " ply

$\frac{1}{8}$ " ply

PYLON DETAIL

$\frac{1}{8}$ " balsa

JOIN PAGES $\frac{1}{32}$ " balsa
ON VERTICAL
KEY LINES
DOUBLERS

Upper wing

Mark control hinge
lines with tissue

Notch bottom
for wire axle

Axle wing
 $\frac{1}{8}$ " balsa

Bert Striegler's

EBENEZER

Tripe

$\frac{1}{16}$ " balsa tailplane

Soft wire hinges