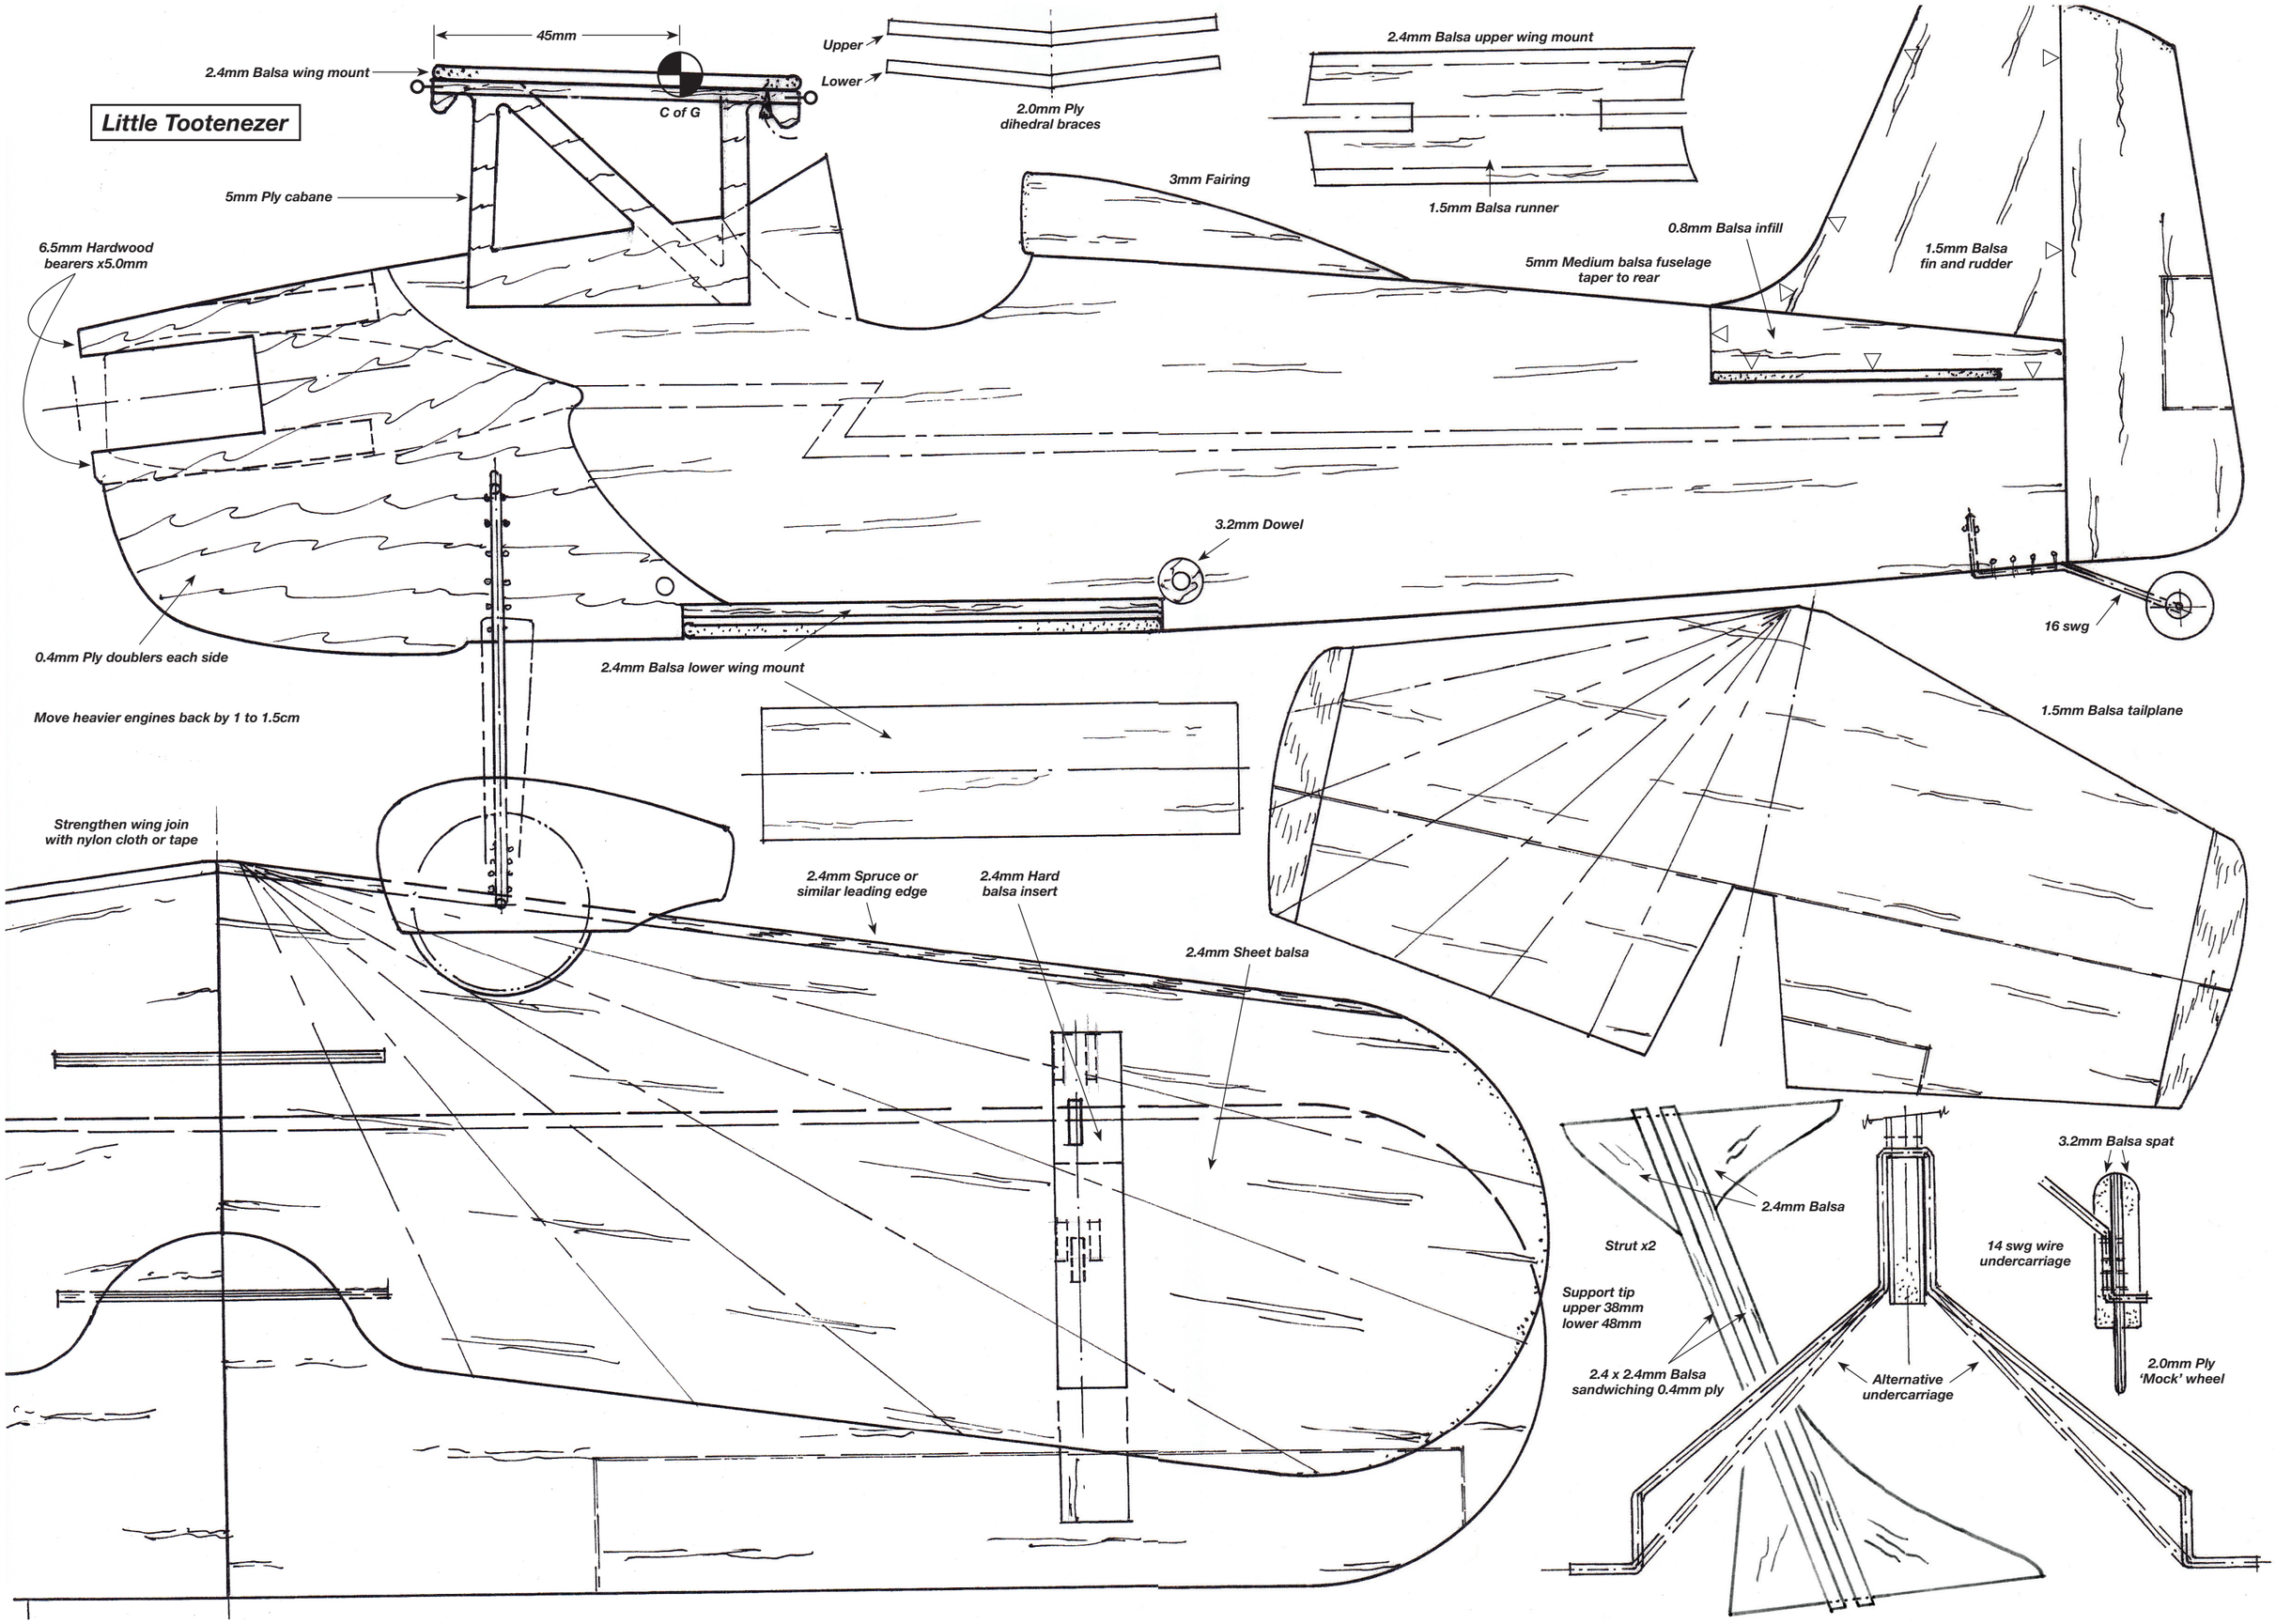
Little Tootenezer
45mm
2.4mm Balsa wing mount
C of G
Upper
Lower
2.0mm Ply
dihedral braces
2.4mm Balsa upper wing mount
1.5mm Balsa runner
5mm Ply cabane
3mm Fairing
6.5mm Hardwood
bearers x5.0mm
0.8mm Balsa infill
5mm Medium balsa fuselage
taper to rear
1.5mm Balsa
fin and rudder
3.2mm Dowel
16 swg
0.4mm Ply doublers each side
2.4mm Balsa lower wing mount
1.5mm Balsa tailplane
Move heavier engines back by 1 to 1.5cm
Strengthen wing join
with nylon cloth or tape
2.4mm Spruce or
similar leading edge
2.4mm Hard
balsa insert
2.4mm Sheet balsa
3.2mm Balsa spat
2.4mm Balsa
Strut x2
14 swg wire
undercarriage
Support tip
upper 38mm
lower 48mm
2.4 x 2.4mm Balsa
sandwiching 0.4mm ply
Alternative
undercarriage
2.0mm Ply
'Mock' wheel